



## Using the Tank Capacity Editor

This feature allows the user to change the tank capacity, units, percent remaining when a warning message is displayed, and tank expiration. **These tank expiration settings override the expiration values set in formula configuration.** The unit of measure set for a tank is the default unit of measure used to update the amount in the tank. The *percent remaining when warning* setting is used to warn the user when a tank is low while preparing a batch with the batch creation tool. Setting the tank capacity to 0 disables tank depletion and tracking tank amounts in the Batch Creation Tool.

To start, select **Edit Tank Capacity Information** from the **Formula Configuration** menu.

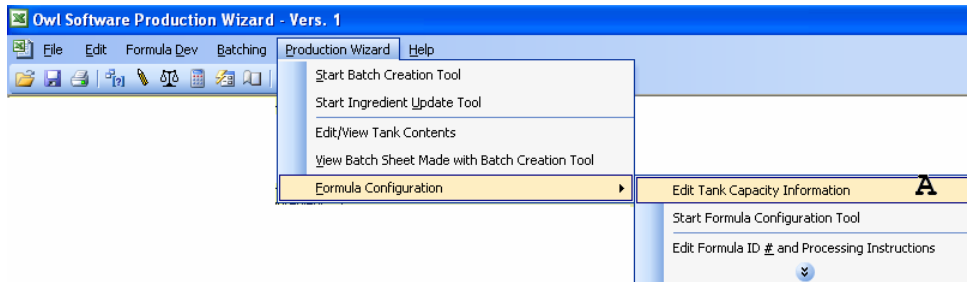

The **Tank Capacity** editor window appears.

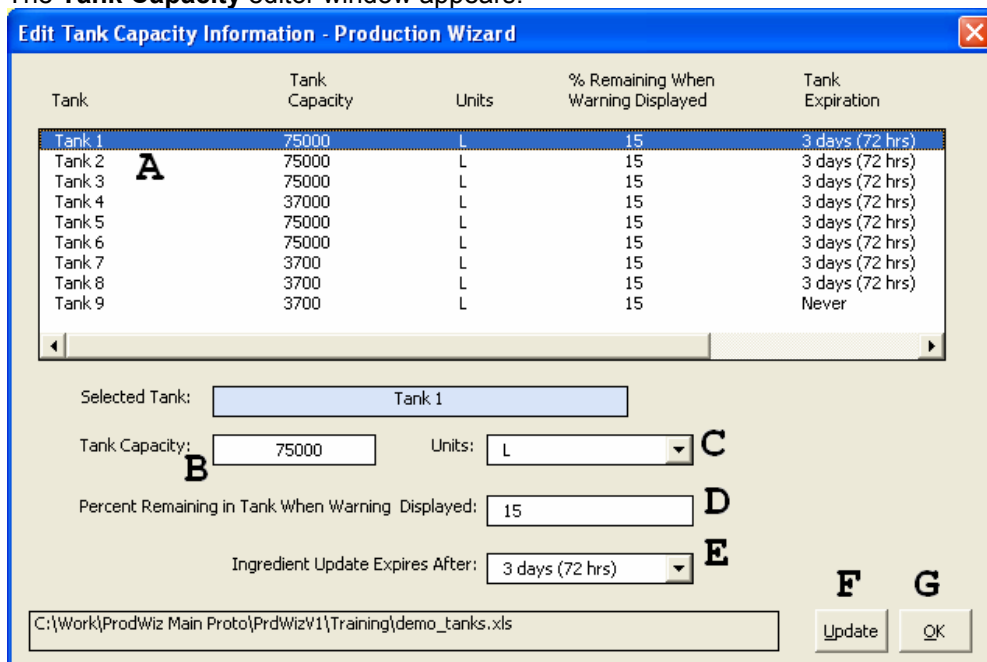

Select the tank to update (A). Enter the tank capacity (B) and select units from the dropdown (C). Enter the percent remaining for warning in the box provided (D). Select an expiration setting for the tank from the dropdown (E). Press the **Update** button (F). Press the **OK** button (G). Select **Yes** (H) to save your changes.

